




## AltaCom II Quick Start Guide


AltaCom II Manual and Inventory List are on the Merlin CD, as are Merlin and the Merlin Manual. Register on our website for access to free downloads.

### Console

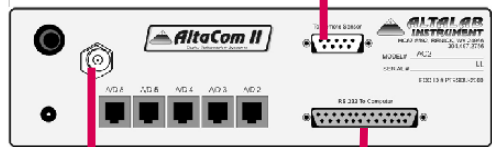

the 20' 9-pin remote sensor cable connects the console to the remote sensor housing

25 pin to 9 pin Serial Cable connects to a USB to Serial Adapter (optional) or to a serial port on your PC.

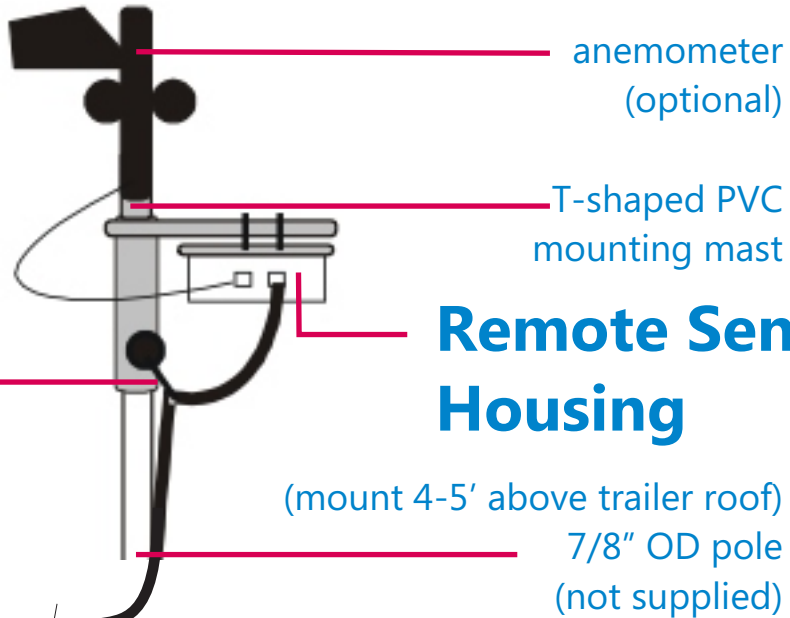

Use the supplied O ring for strain relief

Remote Sensor Cable

Antenna

### Your PC

17' Antenna Cable  
**DO NOT**

Mount on trailer roof or metal at least 1' square.

**OPERATE WEATHERSTATION  
UNLESS ANTENNA IS CONNECTED!**



## **AltaCom II Quick Start Guide p2**

### **Quick Check – Inventory and Test**

Send in Your Warranty Card or register online.

With your permission we will use this information to inform you of updates to your system and to have a record if you should need tech help. We respect your privacy and will not share or sell this information to anyone.

### **Do a Quick Test Before Installation**

It is a good idea to turn on the weatherstation, make sure you have everything and that the system is working correctly before completing an external assembly and before going to a race.

Connect the Remote Sensor Housing to the Console with the Remote Cable. Plug the Power Supply into your outlet and into the Console. Connect the antenna.

### **Merlin**

Our Merlin Software is on a CD along with the Merlin Manual, Merlin tutorial files, and the AltaCom II hardware manual.

Altalab Instrument HC 67 Box 592  
Rt 219 North Renick, WV 24966

### **Register on Our Website**

Registered Users get login credentials to download Merlin Updates, Manuals and Tech Bulletins.

<http://altalabinstrument.com/support/register-your-weatherstation/>

Registration also activates your warranty.

### **Inventory Checklist - AltaCom II Standard Equipment**

- \_\_\_( 1) Console
- \_\_\_( 2a) 110 Power Supply
- \_\_\_( 2b) 12volt cord
- \_\_\_( 3) Standard Antenna\*
- \_\_\_( 4) Permanent Mount Antenna\* optional
- \_\_\_( 5) Remote Sensor Housing
- \_\_\_( 6) Remote Cable (black 20 ft. std 9 in M 9 pin F)
- \_\_\_( 7) Pager(s)\*
- \_\_\_( 8) Serial Cable (tan, 25pin M, 9 pin F)
- \_\_\_( 9) Software CD (includes Hardware Manual)
- \_\_\_(10) Pager Manual
- \_\_\_(11) Warranty Card (on File if purchased direct)
- \_\_\_(13) PVC Mounting Mast
- \_\_\_(14) Aluminum Roof and screws (for Remote Sensor)

### **Options**

- \_\_\_(15) Anemometer
- \_\_\_(16) J10 Connector panel with additional Remote Sensor Cable
- \_\_\_(17) J20 with additional Antenna and Remote Sensor Cables
- \_\_\_(18) Pole Mounting Clamps (set of 2)
- \_\_\_(19) USB to Serial Adapter
- \_\_\_(20) Console Mounting Bracket

Tel (304) 497-2756 Fax 3846  
[www.altalabinstrument.com](http://www.altalabinstrument.com)